


Connecting accessories

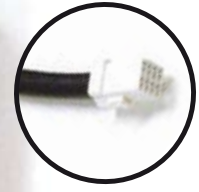

Connecting data and programming



GL-0025-AA
(Switch loom for ECU in central position)



GL-0026-AA
(Switch loom for ECU in front position)

GL-0016-AA
(Basic loom for ECU in central position)



GL-0017-AA
(Basic loom for ECU in front position)



GL-0018-AA
(multilink loom)



GL-0024-AA
(extension loom for M40)

